

H-3614B & H-3614B.4F

Instruction Manual

COUNTER KIT

Manufactured by:

Humboldt Mfg. Co.

7300 West Agatite Avenue
Norridge, Illinois 60706 U.S.A.

Customer Service:

Tel: 1.708.456.6300

Fax: 1.708.456.5412

Email: hmc@ehumboldt.com

USA Toll Free: 1.800.544.7220

Website: www.humboldtmfg.com

Sold and Serviced by:

Humboldt and Authorized Dealers Worldwide

Copyright 2002 Humboldt Mfg. Co., Norridge, IL. 60706, U.S.A.

All rights reserved. Printed in U.S.A.


1. General	3
2. Operating Instruction	3
3. Warranty	4
4. Drawing	5

2. Operating Instruction

- 2.1 Mount Micro-switch to base of flow table stand. Be sure the actuator comes in contact with the cam.
- 2.2 Plug the cord from the flow table into the back of the counter “H” and the power cord from counter into a power socket. 115V, 50/60Hz for H-3614B and 220V, 50/60 Hz for H-3614B.4F.
- 2.3 After all the cords are plugged into their respective sockets, - switch the toggle switch “F” to the “ON” position, the display “I” should indicate “0” in the upper and lower rows. Use selector switches “G” to set the predetermining counter to the desired number of drops, which will appear in the lower display.
- 2.4 To begin a count cycle push the black button “J”, with the upper display indicating a value less than the preset count it activates the motor.
- 2.5 The upper display will increment up to the preset count, one count each time the sensor input is pulses the counter.
- 2.6 When the upper display indicates “the preset value” the motor will stop.
- 2.7 To begin the next count cycle for the same preset, push the black button. Otherwise, change the preset as noted in step 2.3 and then press the black button.

under this warranty if the goods have been improperly maintained, installed, operated or the goods have been altered or modified so as to adversely affect the operation, use performance or durability or so as to change their intended use. The Humboldt Mfg. Co. liability under the warranty contained in this clause is limited to the repair or replacement of defective goods and making good, defective workmanship.

CAUTION: Keep hands, clothing and other objects away from moving parts when the machine is in operation.

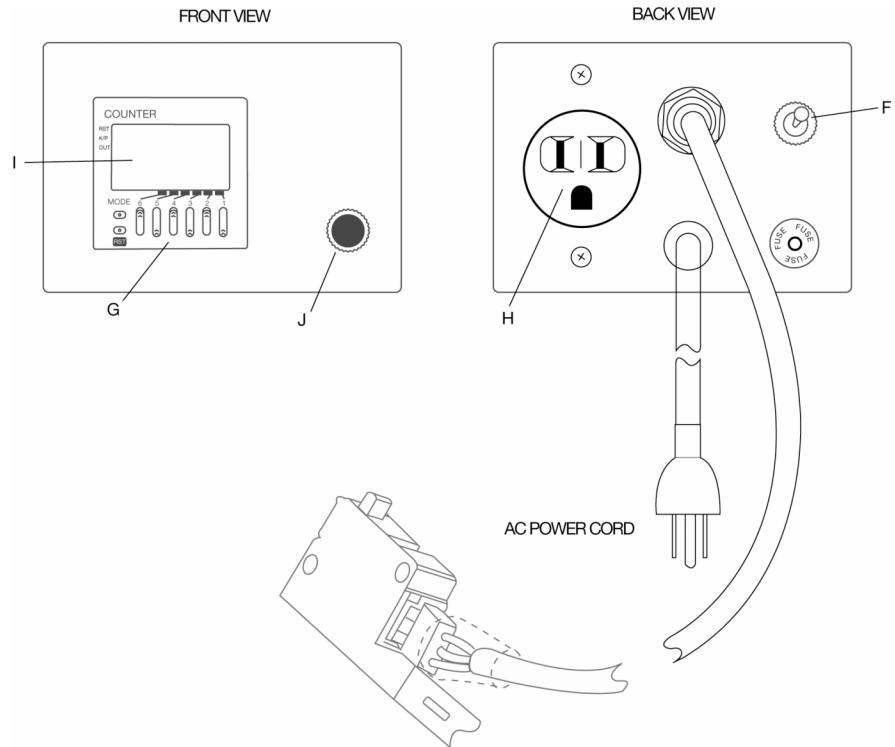

H-3614B
DIGITAL COUNTER KIT