



Air Meter

Operation Instructions

1. Place a representative sample of concrete in 3 equal layers, consolidating each layer by rodding and tapping the bowl, vibration may be substituted.
2. Using a sawing motion, strike off the excess concrete across the top flange with the screeding tool. Wipe the flanges clean.
3. Clamp the cover on with the petcocks open.
4. Using the plastic wash bottle (supplied), inject water through one petcock until all the air is expelled through the opposite petcock.
5. Roll the air meter on the perimeter of the base while lightly tapping the sides to release entrapped air and to ensure complete filling. Gently close the "hands-free" valve.
6. Pump up air to the initial pressure point, as shown for your meter, using the super pump.
7. Wait a few seconds and stabilize the gauge needle on the "initial pressure" line by pumping up or by loosening the bleeder cap, whichever is necessary.
8. Close both petcocks and open the "hands-free" valve. Lightly tap the gauge with fingertips to stabilize the gauge needle.
9. Read and record the percent of air shown on the dial.
10. Gently close the "hands-free" valve. Open the petcocks to release the pressure. Remove the cover.
11. Clean the petcock openings, air meter and accessories with water.
12. Open the "hands-free" valve to release the pressure on the gauge.

To Check Calibration of Meter Gauge

The calibration of the meter may be checked as follows:

1. Fill the base with water.
2. Screw the short piece of straight tubing into the threaded petcock hole on the underside of the cover. Clamp cover on the base with the tube extending down into the water.
3. Open both petcocks, introduce water via the wash bottle through the threaded petcock until all the air is forced out the opposite petcock. Leave both petcocks open.

4. Pump up air pressure to a little beyond the pre-determined initial pressure line.
5. Wait a few seconds for the compressed air to cool to ambient temperature, then stabilize the gauge hand at the proper initial pressure point by pumping or bleeding off as needed.
6. Close both petcocks and immediately crack open the “hands-free” valve, exhausting air into the base.
7. Wait a few seconds until the hand is stabilized. If all the air has been eliminated and the initial pressure line was correctly selected, the gauge should read 0%. If two or more tests show a consistent variation from 0%, then change the initial pressure line to compensate for the variation. Use the newly established “initial pressure” point for subsequent tests.
8. Screw the curved tube into the outer end of the threaded petcock. Controlling the flow with the petcock lever, fill the 5% calibration vessel to its full capacity (354ml) with water from the base of the air meter.
9. Close the “hands-free” valve.
10. Release the air at the free petcock. Open the other petcock and let the water in the curved pipe run back into the base. There is now 5% air in the base.
11. With the petcocks open, pump air pressure in the exact manner as outlined in step 4. Close petcocks and immediately open the “hands-free” valve. Wait a few seconds for the needle to stabilize and for the exhaust air to warm to ambient temperature. The dial should now read 5%.
12. If two or more consistent tests show that the gauge reads incorrectly at 5% air (in excess of 0.2%, or whatever is considered satisfactory), then remove the gauge glass and reset the dial hand to 5%. Do this by turning the recalibration screw, located just below and to the right of the center dial.
13. When the gauge hand reads correctly at 5%, additional water may be withdrawn in the same manner to check results at 10, 15, 20%, etc.

Maintenance Tips

1. Prompt cleaning with water of the air meter cover and pot, both inside and out will ensure a proper seal and volume are maintained.
2. Periodic oiling of petcock screws will prevent them from seizing. WD-40 or a similar product is sufficient.


3. Maintenance of the "hands-free" valve:

Unscrew the valve stem from the valve body using the top brass hex nut. Using a coarse piece of emery cloth or sandpaper, remove the debris and wear lines on the brass valve taper with 2 or 3 quick sandings. One, or two quick polishes with 500 emery cloth finishes the cleaning. Coat the valve taper with white lithium or plumber's grease. Before returning the valve stem to the valve, ensure that the valve hole is clear all the way through to the underside of the cover. Screw the valve stem back into the valve.

4. If the "hands-free" valve continues to leak, put the air meter cover on a flat surface and strike the top of the valve with a direct hammer blow. You may need to turn the top handle once or twice to tighten it down. Repeat if leaks persist.

H-2785DB Super Pump Replacement Parts

H-2785.DB1	Valve nut
H-2785.DB2	Valve
H-2785.DB3	Valve O-ring
H-2785.DB4	Pump tube
H-2785.DB5	Pump cap
H-2785.DB6	Stem nut
H-2785.DB7	Pump piston
H-2785.DB9	Pump stem
H-2785.DB10	Pump handle
H-2785.DB12	Stem cap
H-2785.51	Pump piston O-ring
H-2785.53	Pump tube O-ring

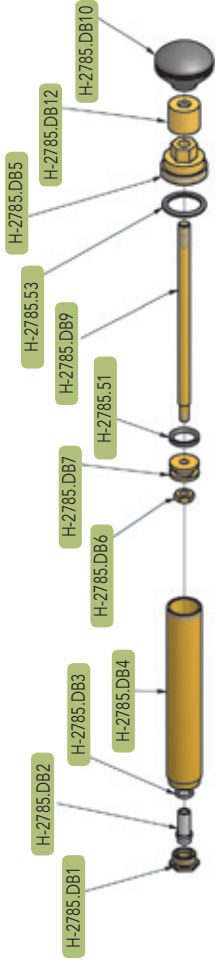

Warranty

Humboldt Mfg. Co. warrants its products to be free from defects in material or workmanship. The exclusive remedy for this warranty is Humboldt Mfg. Co., factory replacement of any part or parts of such product, for the warranty of this product please refer to Humboldt Mfg. Co. catalog on Terms and Conditions of Sale. The purchaser is responsible for the transportation charges. Humboldt Mfg. Co. shall not be responsible under this warranty if the goods have been improperly maintained, installed, operated or the goods have been altered or modified so as to adversely affect the operation, use performance or durability or so as to change their intended use. The Humboldt Mfg. Co. liability under the warranty contained in this clause is limited to the repair or replacement of defective goods and making good, defective workmanship.

Humboldt Mfg. Co.

3801 North 25th Avenue
Schiller Park, Illinois 60176 U.S.A.

U.S.A. Toll Free: 1.800.544.7220

Voice: 1.708.456.6300

Fax: 1.708.456.0137

Email: hmc@humboldtmfg.com

Testing Equipment for



Construction Materials

HUMBOLDT

www.humboldtmfg.com